




Installer: DO NOT THROW AWAY! Provide this guide to the end-user with your Contact Card attached to the back.

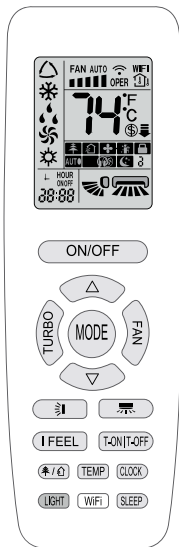

ICONS DISPLAYED

- COOL
- DRY
- HEAT
- POWER
- SET TEMP




NOTE: Some functions not available on all models. Please read the complete owner's manual carefully before operation.

- ON/OFF** Press to power the unit on or off.
- FAN** Press to select fan speed (Auto, Low, Medium, High or Turbo). Auto is default.
- MODE** Press to select and adjust each mode.
 HEAT COOL DRY
 FAN ONLY AUTO
- △** Press to raise settings including temperature and time.
- I FEEL** Press to have the unit control temperature sensed at remote.
- TURBO** Press to boost cooling or heating airflow. Quickest way to reach preset temperature.
- ▽** Press to lower settings including temperature and time.
- TEMP** Press to select temperature display: indoor or desired room temperature (Adjust desired temperature with "△" and "▽" buttons.)
- SLEEP** Press to select SLEEP mode, offering custom comfort control while sleeping. See Owner's Manual for more details.
- WiFi** Press "WiFi" button to turn on or turn off WiFi function. WiFi module will restore to factory default setting.
- CLOCK** Press to display time of day.
- LIGHT** Press to turn lights on the unit's Front Panel Display. Press again to turn off.
- T-ON T-OFF** Press to start or stop the timer. (Adjust with "△" and "▽" buttons.) See Owner's Manual for more details.
- Press to adjust swing louver left & right.
- Press to adjust swing louver up & down.

SYSTEM MAINTENANCE **

CLEAN INDOOR UNIT'S AIR FILTER 1 X MONTH

Save energy by preventing indoor coils from being plugged with dirt and lint. To remove the filter, gently push forward on the handle tabs, then lift the filter out of place. Rinse or vacuum - do not scrub filter with a brush or place in the dishwasher. Damage could occur.

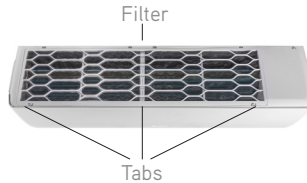

AUTO CLEAN FUNCTION, INDOOR UNIT

Under unit OFF status, hold "MODE" and "FAN" buttons simultaneously for 5s to turn Auto Cleaning on or off. When Auto Clean is on the indoor unit displays "CL" and the unit will heat up and cool quickly. You may hear the sound of flowing liquid or thermal expansion or contraction. Make sure the room is well ventilated at this time as the unit may blow cool or warm air, this is normal.

FAQs

Why does the fan continue to run even when the unit is not cooling or heating?

To maintain consistent temperatures and minimize energy-loss from constant starts & stops, the fan keeps airflowing past the sensor.

What temperature is displayed on the remote controller?

The remote always displays your desired indoor temperature. (You may view current indoor temperatures, as well as desired temperature, on the indoor unit's Front Panel Display.)

How can I operate the unit without the remote?

Lift the front panel section on the indoor unit and locate the AUX button on the right-hand side. Press the button to turn the unit ON or OFF. (Not all functions will be available.)

How can I change the temperature display from Celsius to Fahrenheit?

Turn the unit OFF, then press "▽" and "MODE" buttons on the remote simultaneously to switch between °C and °F.

SERVICES ⚠

For 6 month servicing, please call the installing contractor.

 
Installer:

Attach your business card here.



For Additional
Owner Information,
scan QR Code.

For more information, visit
GREECOMFORT.COM



Specifications are subject to change without notice. Manufacturer reserves the right to discontinue, or change at any time, specifications, or designs without notice or without incurring obligations. ©2022. All rights reserved.

END_USER_START_GUIDE_080522